

care & protection



world of cooking

The new care function
for the MKN FlexiChef®

Hard water – No problem for the FlexiChef®! Our new "care & protection" function including systematic descaling extends the working life of your FlexiChef®.

Our answers to the most frequently asked questions:

How often does the FlexiChef® require descaling?

Generally, the harder your water is, the more frequently your appliance needs descaling. If the water hardness is 4.5 mmol/l the FlexiChef® requires descaling after approx. 150 cleaning cycles*. If your water is softer, descaling cycles are required less often. Descaling is not necessary at all if the water hardness lies under 0.5 mmol/l.

How does the new care function work?

"Care & protection" provides systematic care and descaling of your appliance. The liquid descaling solution comes in a bottle with screw top and an additional seal ensuring safe application for the user as there is no direct contact with the liquid. To start the "care & protection" function, simply remove the screw top and insert the bottle into the opening on the side frame of the FlexiChef®. The seal breaks and you can simply start the descaling process on the MagicPilot control panel.

Where can I obtain the descaler?

You can get the "care & protection" descaler in 250 ml bottles (1 box with 6 bottles) from your dealer.



*2 minute cleaning cycle