

Digital Multi-Timer

Digital Multi-Timer

Thanks for purchasing the Digital Multi-Timer. This product will take the guesswork out of food preparation and help you to co-ordinate the cooking times for up to 4 items simultaneously. Multiple placement options enable you to stand it on a worktop, clip it or use the rear magnet to site it in the most visible and convenient position. That's the Digital Multi-Timer. That's **Happy** Cooking.

OPERATING PRECAUTIONS

- Do not use or store this timer in areas exposed to temperature extremes, strong magnetism, strong vibration, or high impact.
- Heat can shorten battery life and cause malfunction. Keep the timer away from heaters and direct sunlight when in use.
- Never use the timer in a bathroom or any other area subject to high humidity.
- Never try to take the timer apart. Doing so can cause malfunction.
- To clean the timer, use a soft, dry cloth or a cloth moistened in a solution of water and a mild neutral detergent. Wring out all excess moisture from the cloth. Never use thinner, benzene, alcohol or other similar agents.
- Remember that this timer has a magnet on its clip. Keep it away from credit cards, bank cards, prepaid cards, and other cards with magnetic strips, as well as audio and video tape, floppy diskettes, and other items that can be damaged or rendered unusable by magnetism.
- Keep your manual and all information handy for future reference.

USER INSTRUCTIONS

- Timer buttons 1 to 4
- Clock
- Digital Screen
- Hours
- Minutes
- Seconds
- Clear
- START/STOP
- Battery Cover
- Free-Standing Hinge
- Magnet
- Clip

SETTING THE TIME

- Hold down the CLOCK button for several seconds until the time starts to flash. This is the setting screen.
- Press the Hr button to increase the hours, Min to increase the minutes, and Sec to increase the seconds.
- After the setting in the time you want, press the CLOCK button to exit the setting screen.

USING THE TIMER

To start a timer operation

- Press a timer button (T1 to T4) to select a timer.
- Set the start time. Press the Hr button to increase the hours, Min to increase the minutes, and Sec to increase the seconds.
 - Holding down any button increase its setting at high speed.
 - The maximum start time setting is 99 hours, 59 minutes, 59 seconds.
 - Pressing the C button clears the timer setting to all zeros.
- Press the START/STOP button to start the countdown operation.
 - Pressing the START/STOP button during a countdown operation stops it.
 - Pressing the START/STOP button again restarts the countdown from the point where it was stopped.

Simultaneous Timing

All four timers can be set to perform countdown operations at the same time. When any timer is performing a countdown operation, its timer number (T1, T2, T3 or T4) flashes in the right hand corner of the display whilst another timer is being set. (Fig.1)

End of Countdown

When the end of a countdown is reached, the timer beeps and the timer starts to measure the time elapsed following the end of the countdown.

- The beeper continues for one minute or until you press the START/STOP button. Different beeper tones are used for each timer.
- Time elapsed from the end of a countdown can be measured up to 99 hours 59 minutes 59 seconds.
- To stop the elapsed time operation, press the START/STOP button. Pressing the START/STOP button again resets the timer to the original start time.
- Pressing the C button resets the timer to all zeros.

Count-up Function

When the timer setting is zero, press the START/STOP button and the timer will start to count up. Press the START/STOP button again, it will pause. The maximum count-up time is up to 99 hours 59 minutes 59 seconds.

POWER SUPPLY

- The timer requires 1 x 3V CR 2032 battery which is already installed. An insulator sheet is inserted between the battery and contact to avoid consumption of battery power. Be sure to remove the insulator sheet before using the product.
- The batteries that come with the timer are not re-chargeable.
- Replace the batteries at least once a year, even if the current batteries are working properly.

- Slowed or stopped timekeeping indicates low battery power. Do not leave the batteries in the timer after these symptoms appear. Replace batteries as soon as possible.
- Remove the batteries from the timer if you do not plan to use it for a long time.
- Should batteries ever leak, wipe out the interior of the battery compartment whilst taking care to avoid allowing the battery fluid to come into contact with your skin.
- Keep batteries out of the reach of small children.
- To change or install battery:
 - Twist a coin in the battery cover in the direction indicated
 - Remove the battery and load a new one, taking care that the positive (+) and negative (-) sides of the battery are facing correctly.
 - Replace and close the battery cover.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- This device may not cause harmful interference, and
- This device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Notes: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet or circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio / TV technician for help.

Specifications

Dimensions: W73 x H65 x D36 mm

Battery: 1 x 3V CR 2032.



Made in China